



KERN & Sohn GmbH

Ziegelei 1
72336 Balingen-Frommern
Allemagne

www.kern-sohn.com

+0049-[0]7433-9933-0

+0049-[0]7433-9933-149

info@kern-sohn.com

Guide d'installation Paire de repose-pieds

KERN BFS-A06N / BFS-A10 / BFN-A03

Version 1.7

2024-07

F



BFS-A06N_BFS-A10_BFN-A03-IA-f-2417



KERN BFS-A06N / BFS-A10 / BFN-A03

Version 1.7 2024-07

Guide d'installation

Paire de repose-pieds

Contenu

1	Consignes de sécurité de base	2
1.1	Respecter les indications de la documentation	2
1.2	Formation du personnel.....	2
1.3	Déballage et vérification	2
1.4	Installation	3
2	Dessins	4

1 Consignes de sécurité de base

1.1 Respecter les indications de la documentation



⇒ Lire attentivement le document avant l'installation.

1.2 Formation du personnel

Le produit ne doit être installé que par un personnel qualifié utilisant du matériel de fixation approprié.

1.3 Déballage et vérification

Retirer le produit de son emballage et enlever le matériel d'emballage. Vérifier que toutes les pièces livrées sont présentes et intactes.

Contenu de la livraison / Accessoires de série :

- Paire de repose-pieds
- Guide d'installation


1.4 Installation

INFORMATION




- Les travaux préparatoires nécessaires sont décrits dans les instructions d'installation respectives du pont de pesée.
- Vous trouverez la distance entre les plaques de base dans les dessins de chaque pont de pesée.

1. Ancrer les plaques de base dans le sol à l'aide de matériaux de fixation appropriés.
2. Placer le pont de pesée avec les pieds réglables dans l'évidement des plaques de base

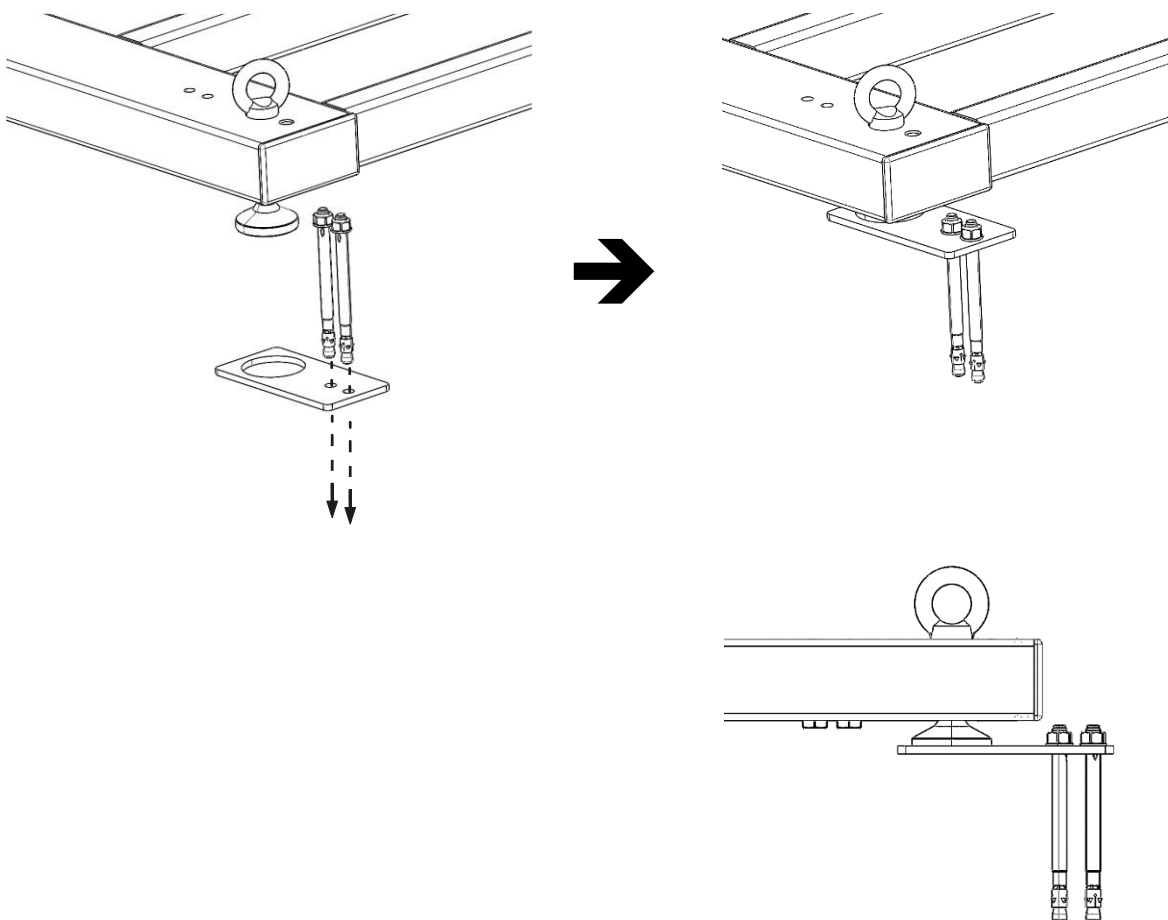


2 Dessins

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

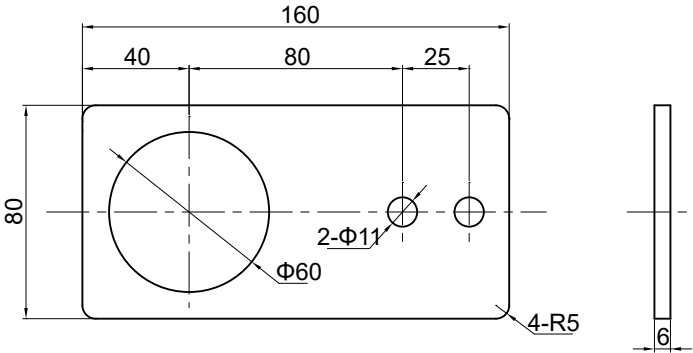


TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ± 0.1 FOR 0.X ± 0.05 FOR 0.XX		± 0.5		KERN® KERN & SOHN GmbH		
 3RD ANGLE PROJECTION		TITLE:		BFS-A06N		
DRAWN	Y.J.Zhao	MODEL NO.		TFG-Foot fixing piece -KERN	PART NO.	131900200123
CHECKED	Tim.Zhao	MATERIAL		FINISH		
APPROVED	Tim.Zhao	SCALE		DO NOT SCALE DRAWING	SHEET OF	
UNIT	mm					

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

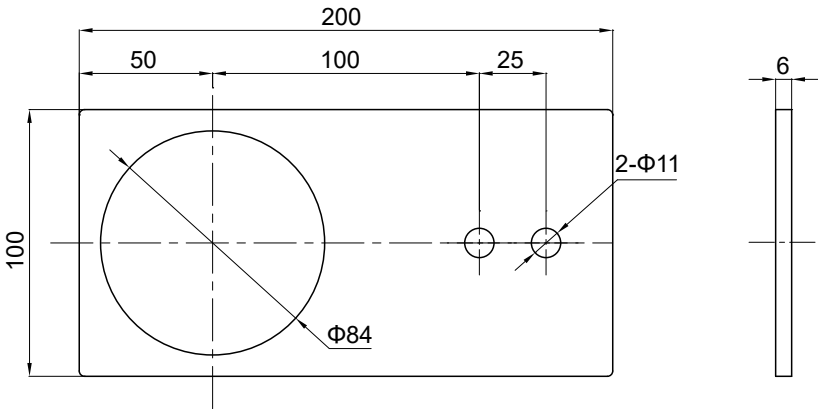

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		<i>KERN® KERN & SOHN GmbH</i>			
3RD ANGLE PROJECTION		TITLE: BFS-A10			
DRAWN	Y.J.Zhao				
CHECKED	Tim.Zhao	MODEL NO.	TF1515-6T-Foot fixing piece-KERN	PART NO.	131900200084
APPROVED	Tim.Zhao	MATERIAL		FINISH	
UNIT	mm	SCALE		DO NOT SCALE DRAWING	SHEET OF

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

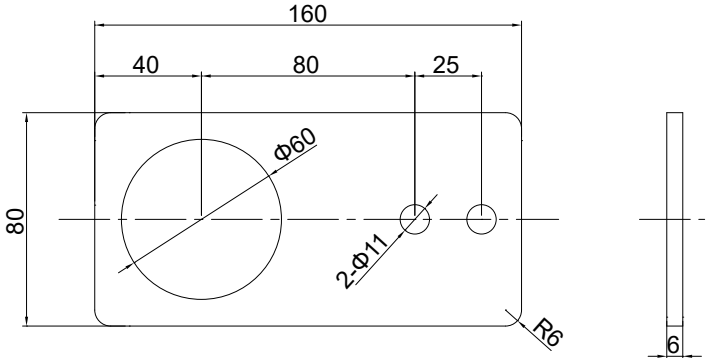

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		<i>KERN® KERN & SOHN GmbH</i>			
3RD ANGLE PROJECTION		TITLE: BFN-A03			
DRAWN	Y.J.Zhao				
CHECKED	Tim.Zhao	MODEL NO.	TFGS-Foot fixing piece-KERN	PART NO.	131900200221
APPROVED	Tim.Zhao	MATERIAL		FINISH	
UNIT	mm	SCALE		DO NOT SCALE DRAWING	SHEET OF