



KERN & Sohn GmbH

Ziegelei 1
72336 Balingen-Frommern
Niemcy

www.kern-sohn.com

+0049-[0]7433-9933-0

+0049-[0]7433-9933-149

info@kern-sohn.com

Instrukcje instalacji Rampa dojazdowa

**KERN BFN-A01 / BFN-A05 /
BFS-A01N / BFS-A02N /
BFS-A09N / BFS-A11**

Wersja 5.1

2024-07

PL



BFN-A01_BFN-A05_BFS-A01N_BFS-A02N_BFS-A09N_BFS-A11-IA-pl-2451



KERN BFN-A01 / BFN-A05 / BFS-A01N / BFS-A02N / BFS-A09N / BFS-A11

Wersja 5.1 2024-07

Instrukcje instalacji Rampa dojazdowa

Zawartość

1	Podstawowe instrukcje bezpieczeństwa	2
1.1	Postępuj zgodnie z instrukcjami w dokumentacji.....	2
1.2	Szkolenie personelu	2
1.3	Rozpakowywanie i sprawdzanie.....	2
1.4	Instalacja	3
2	Rysunki.....	4

1 Podstawowe instrukcje bezpieczeństwa

1.1 Postępuj zgodnie z instrukcjami w dokumentacji



⇒ Przed instalacją należy uważnie przeczytać dokument.

1.2 Szkolenie personelu

Produkt może być instalowany wyłącznie przez wykwalifikowanych specjalistów przy użyciu odpowiednich materiałów mocujących.

1.3 Rozpakowywanie i sprawdzanie

Wyjąć produkt z opakowania i usunąć materiał opakowaniowy. Sprawdzić, czy wszystkie części wchodzące w zakres dostawy są obecne i nieuszkodzone.

Zakres dostawy / akcesoria standardowe:

- Rampa dojazdowa
- Instrukcje instalacji


1.4 Instalacja

INFORMACJE




- Niezbędne prace przygotowawcze opisano w odpowiedniej instrukcji montażu wagi pomostowej.

1. Przymocuj każdą płytę podstawy do podłogi za pomocą odpowiednich materiałów mocujących.

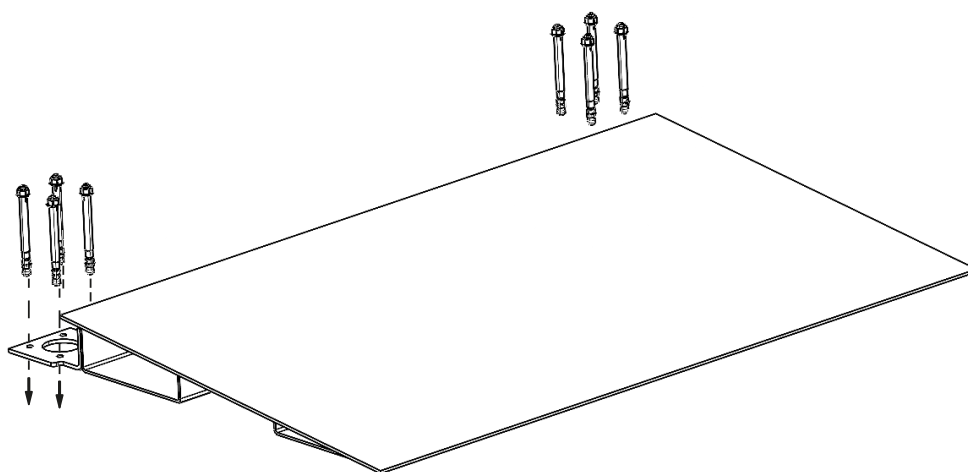




2. Umieścić platformę wagową ze stopkami poziomującymi we wgłębieniu płyt podstawy (odległość **A** między platformą wagową a rampą najazdową musi wynosić co najmniej 2 mm).

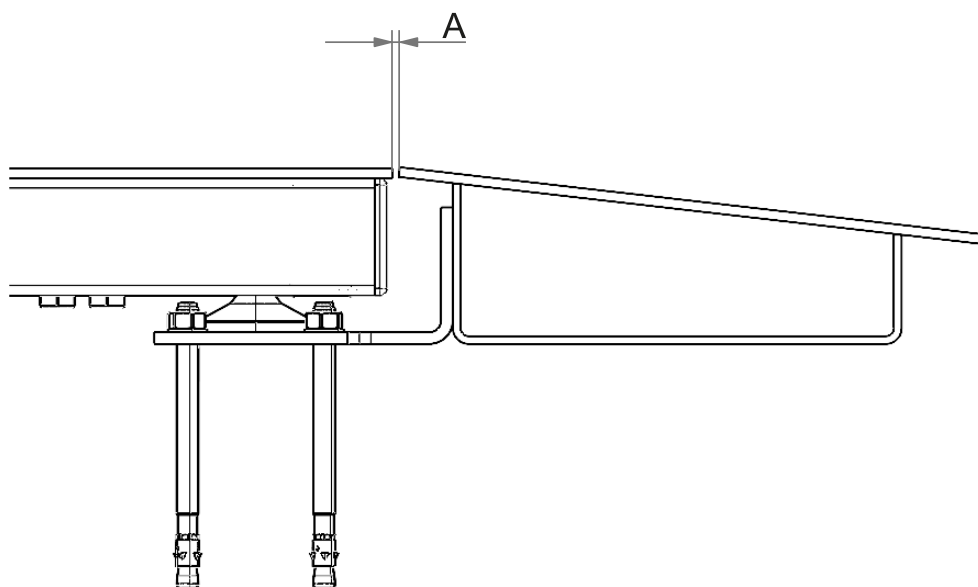

2 Rysunki

A4




REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

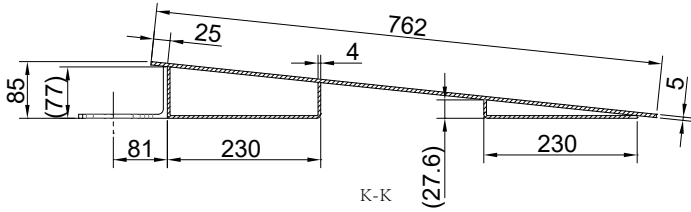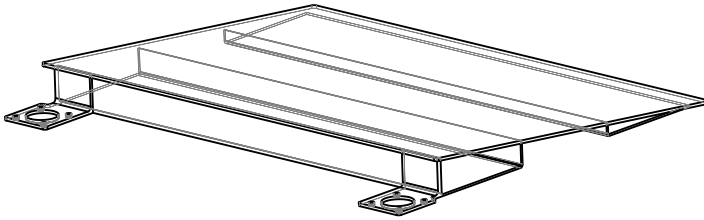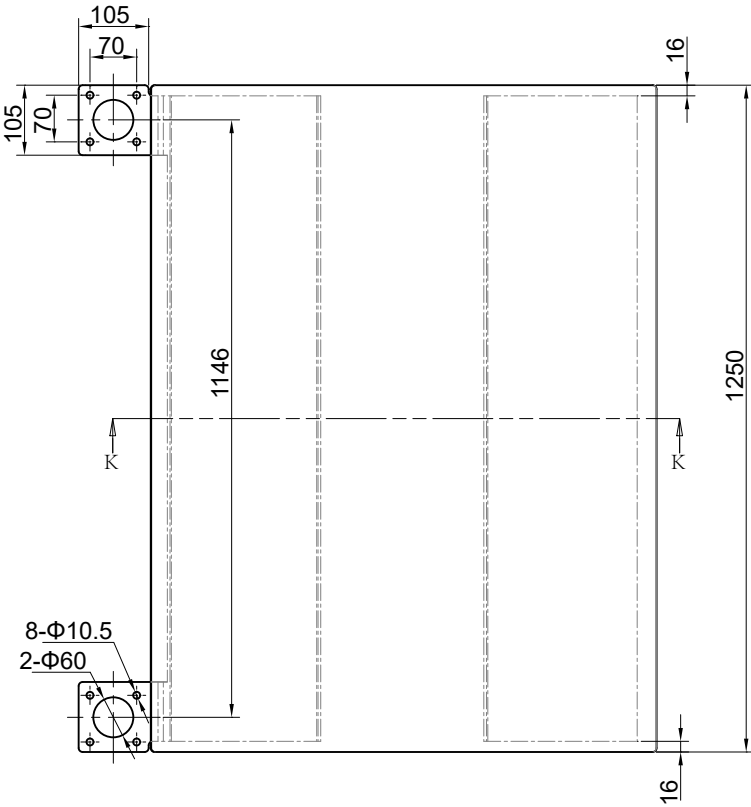

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ± 0.1 FOR 0.X ± 0.05 FOR 0.XX		<i><u>KERN</u></i>[®] KERN & SOHN GmbH			
 3RD ANGLE PROJECTION		TITLE: BFN-A01			
DRAWN	Y.J.Zhao				
CHECKED	Tim.Zhao	MODEL NO.	RMS 1.25M-KERN	PART NO.	130901100005
APPROVED	Tim.Zhao	MATERIAL		FINISH	
UNIT	mm	SCALE		DO NOT SCALE DRAWING	SHEET OF

A4



REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

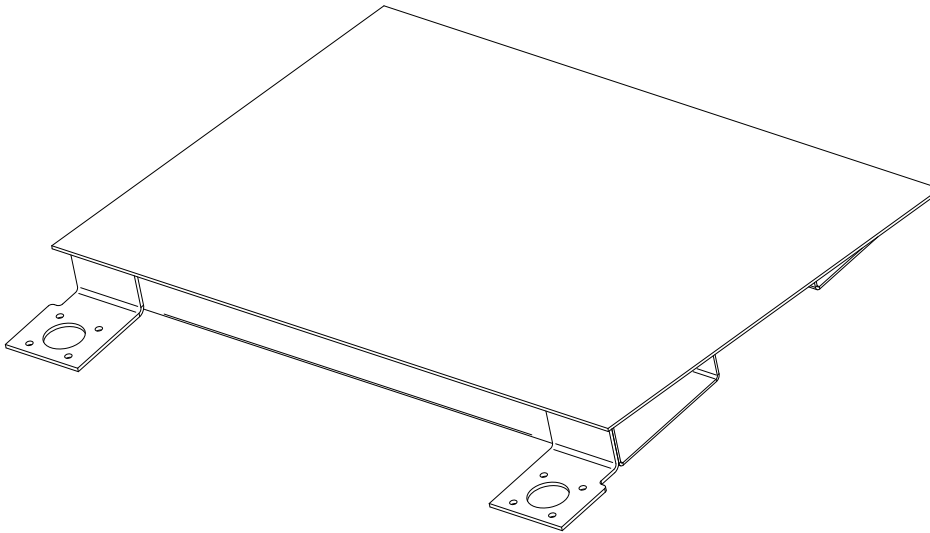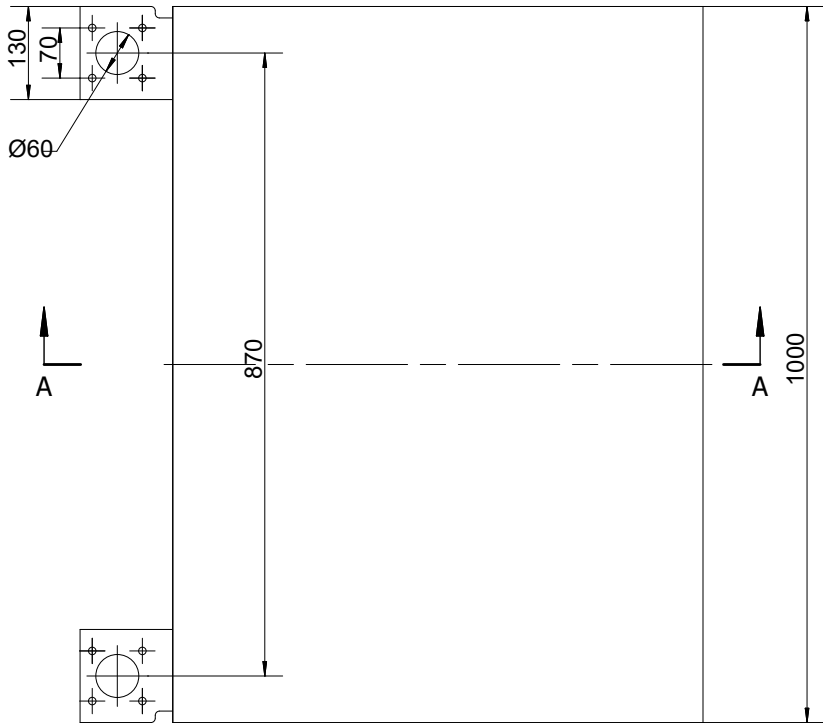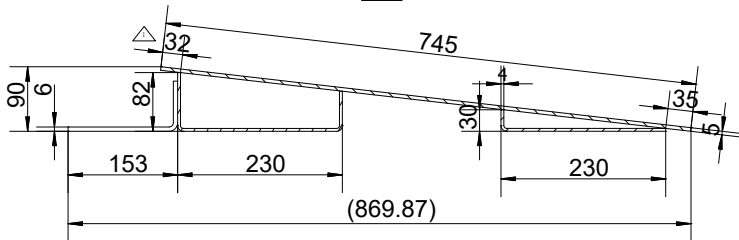

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		<i>KERN</i> KERN & SOHN GmbH			
 3RD ANGLE PROJECTION		TITLE:		BFN-A05	
DRAWN	Y.J.Zhao				
CHECKED	Tim.Zhao	MODEL NO.	RMS1.0M-TFGS1010 -KERN	PART NO.	130901100009
APPROVED	Tim.Zhao	MATERIAL		FINISH	
UNIT	mm	SCALE		DO NOT SCALE DRAWING	SHEET OF



A4

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

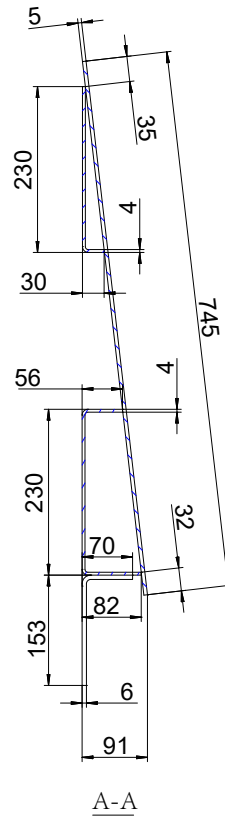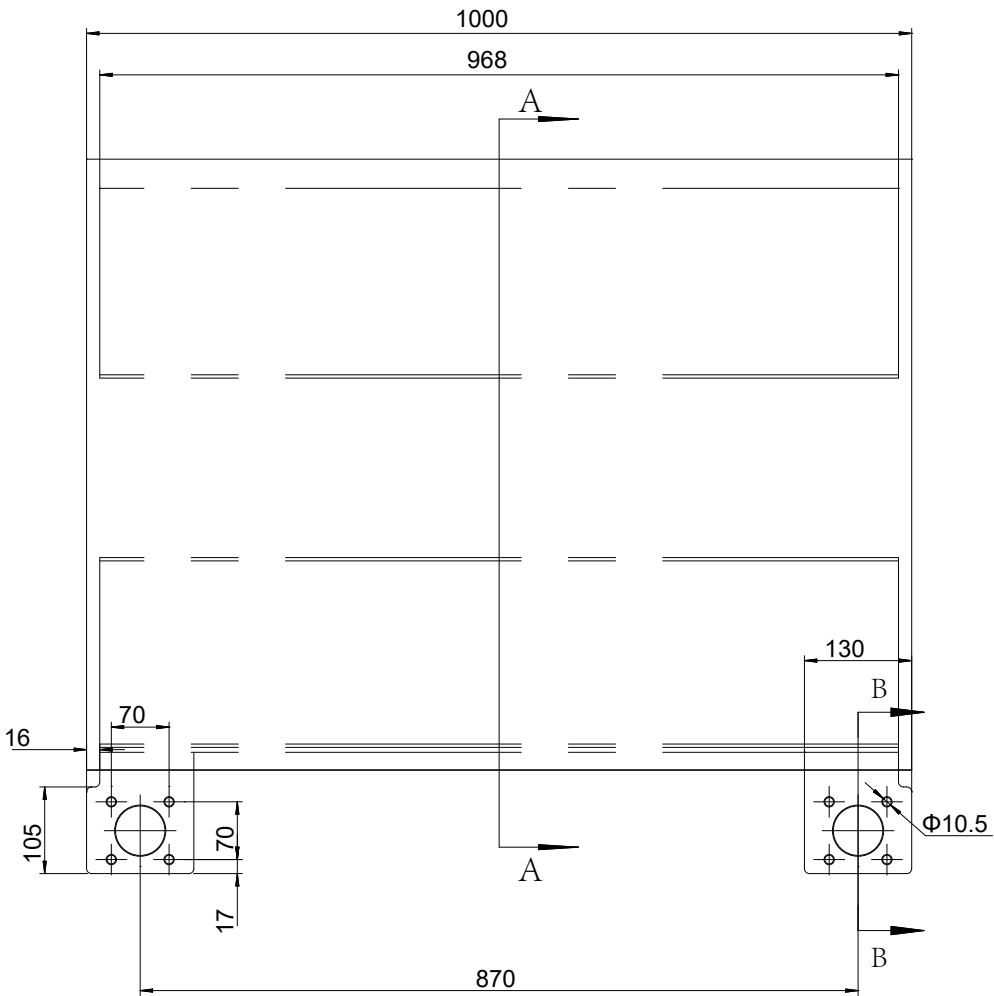


TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ± 0.1 FOR 0.X ± 0.5 ± 0.05 FOR 0.XX		<i><u>KERN</u></i> KERN & SOHN GmbH			
 3RD ANGLE PROJECTION		TITLE: BFS-A01N			
DRAWN Y.J.Zhao		RM1.0M-TFG1010 -KERN			
CHECKED Tim.Zhao		MODEL NO.		PART NO. 130901000035	
APPROVED Tim.Zhao		MATERIAL		FINISH	
UNIT mm		SCALE		DO NOT SCALE DRAWING SHEET OF	

A4

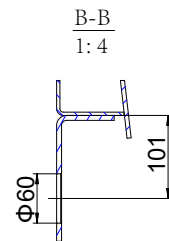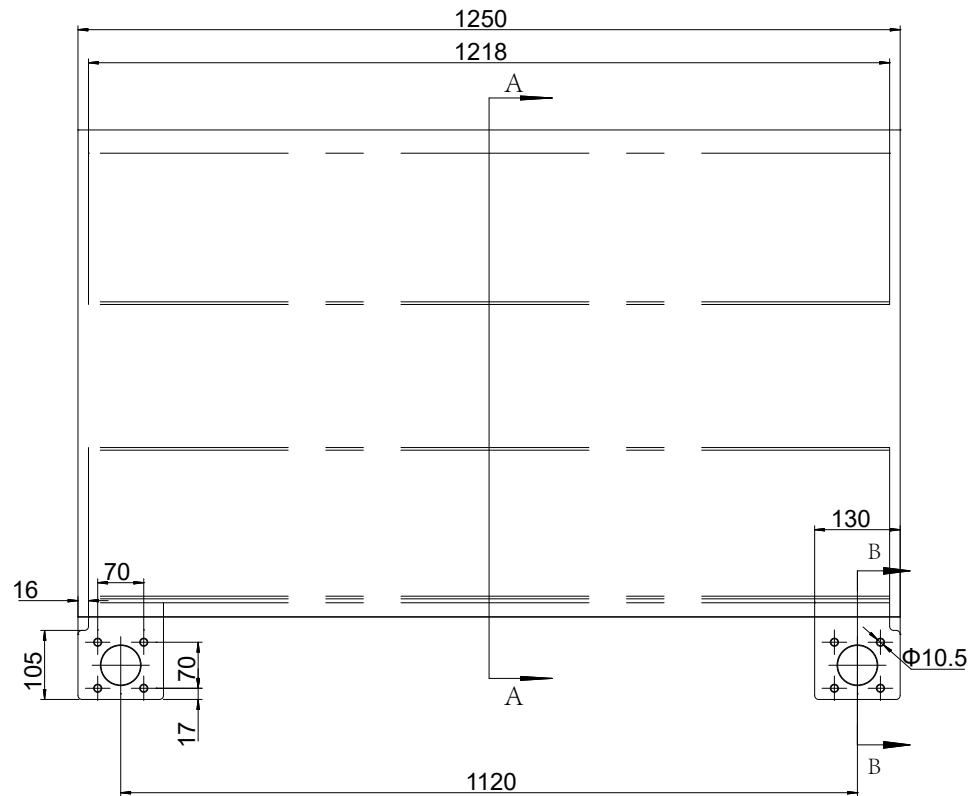

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao



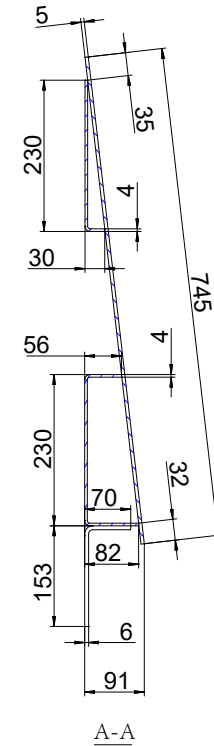


TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ± 0.1 FOR 0.X ± 0.05 FOR 0.XX		± 0.5		KERN® KERN & SOHN GmbH	
3RD ANGLE PROJECTION		TITLE:		BFS-A02N	
DRAWN	Y.J.Zhao	MODEL NO.		PART NO.	130901000036
CHECKED	Tim.Zhao	RM1.25M-TFG12515 -KERN			
APPROVED	Tim.Zhao	MATERIAL		FINISH	
UNIT	mm	SCALE	DO NOT SCALE DRAWING		SHEET OF

A4

REVISIONS

ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

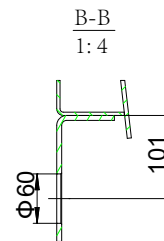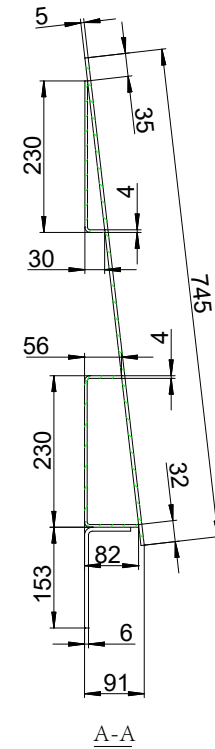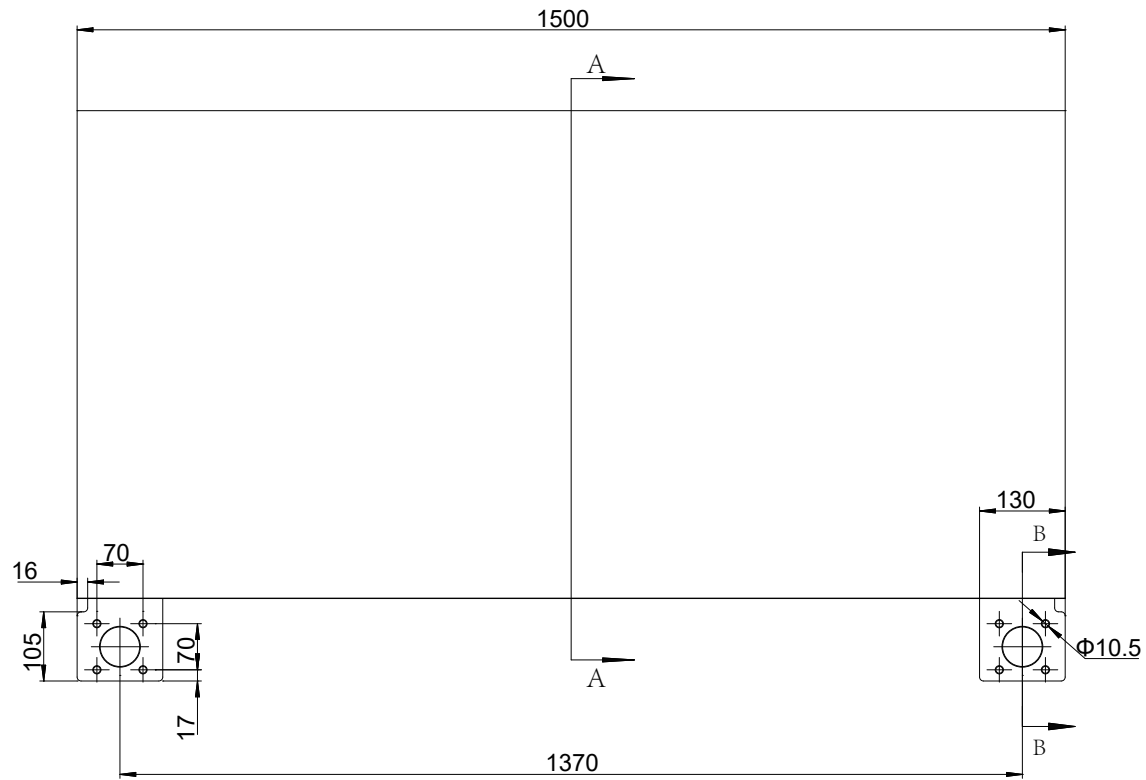

TOLERANCE UNLESS
OTHERWISE SPECIFIED
DEC ANGLES
±0.1 FOR 0.X
±0.05 FOR 0.XX

±0.5



3RD ANGLE PROJECTION

DRAWN

Y.J.Zhao

CHECKED

Tim.Zhao

APPROVED

Tim.Zhao

UNIT

mm

KERN® KERN & SOHN GmbH

TITLE:

BFS-A09N

MODEL NO.

RM1.5M-KERN

PART NO.

130901000039

MATERIAL


FINISH

SCALE


DO NOT SCALE DRAWING

SHEET OF

A4

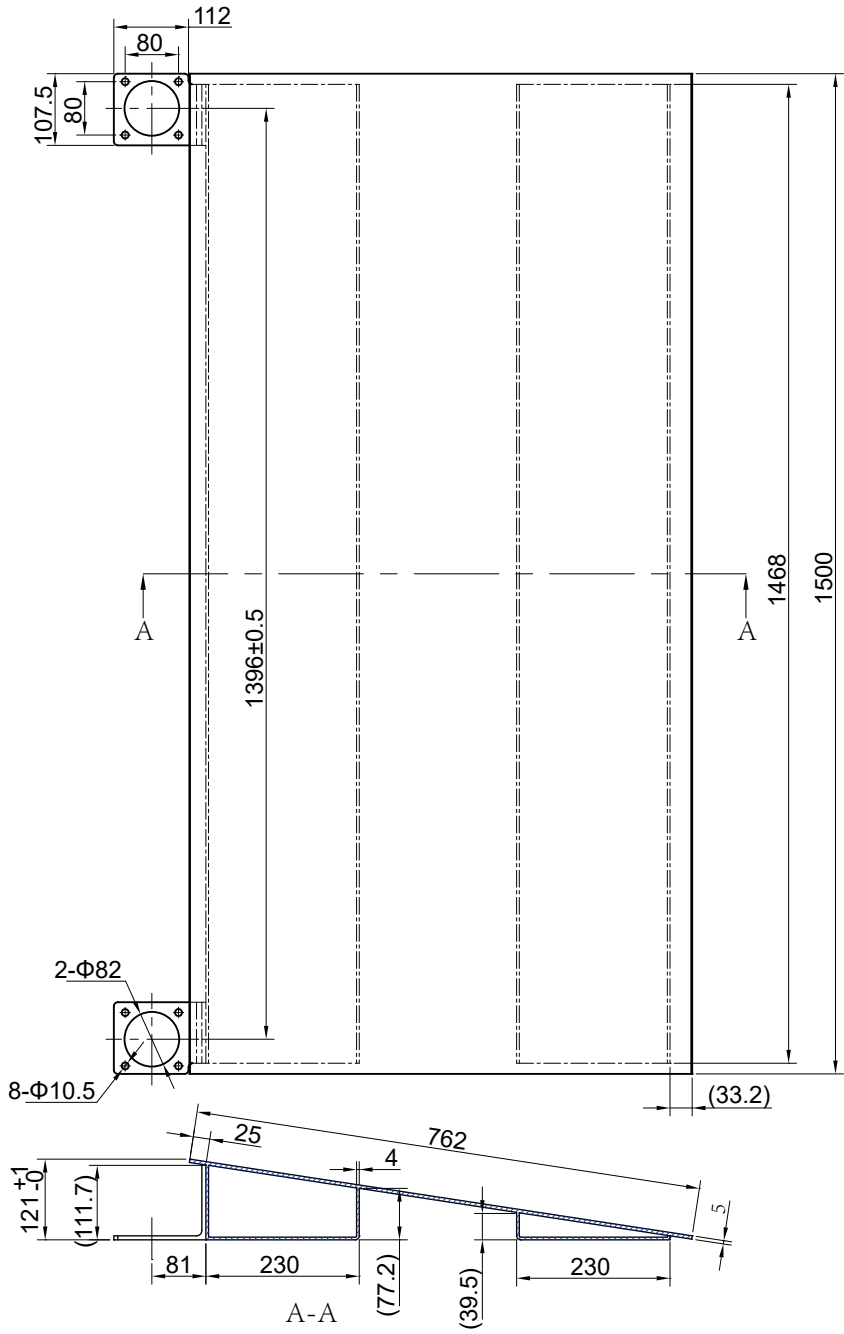

REVISIONS				
ZONE	REV.	DESCRIPTION	DATE	APPROVED
	A0	Released	2024.05.06	Tim.Zhao

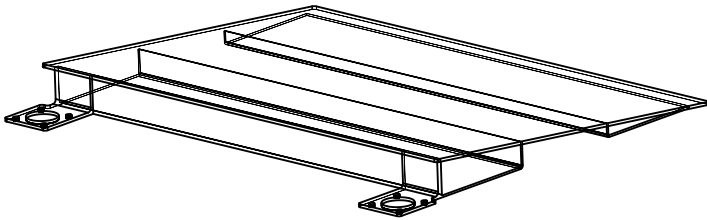

TOLERANCE UNLESS OTHERWISE SPECIFIED DEC ANGLES ±0.1 FOR 0.X ±0.05 FOR 0.XX		<i>KERN® KERN & SOHN GmbH</i>			
 3RD ANGLE PROJECTION		TITLE: BFS-A11			
DRAWN Y.J.Zhao		MODEL NO. RM1.5M-KERN-TF1515-6T			
CHECKED Tim.Zhao		PART NO.		130901000030	
APPROVED Tim.Zhao		MATERIAL		FINISH	
UNIT mm		SCALE		DO NOT SCALE DRAWING	
				SHEET OF	