

PRODUCT BROCHURE

KERN SET-35

Date: 18.03.2025

ENGLISH

Software EasyTouch SET-35 **Assembly Count**

EasyTouch Assembly Count – Order picking, rapid, simple and error-free

CONTACT

KERN & SOHN GmbH
Ziegelei 1
72336 Balingen
Germany

Phone : +49 7433 9933-0
Fax : +49 7433 9933-149
Email : info@kern-sohn.com
Web : www.kern-sohn.com

Assembly cost
Measurement date: 2020-01-01

Language: English User: Edward Scharf

Measurement date: 2020-01-01





Test object assembly: 80 parts
Reference assembly: 80 parts
Test object weight: 0.0001 kg

Test date: 01.01.2020

Legend: Actual (orange), Planned (blue)

Cost Center	Actual (EUR)	Planned (EUR)
80	~18	~19
81	~18	~19
82	~18	~19

Buttons: Back, OK, Cancel, Print, Help

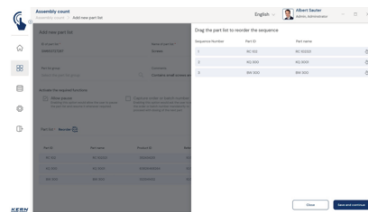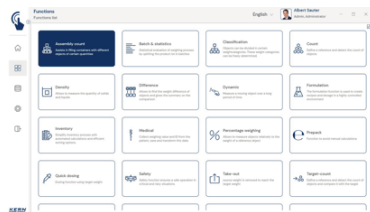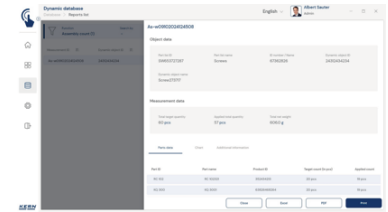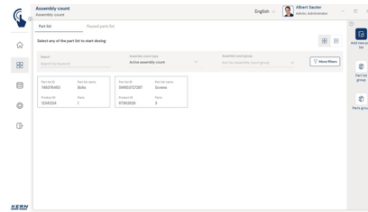

ENGLISH

- Each item in the parts list can be stored with its own master data, such as, for example, reference weight per piece or ID number. The ID number enables identification of item through barcode scanning. Scanning increases the certainty that incorrect parts are not added
- By monitoring the selection process with the balance and Assembly Count function, not only are complaints and errors due to missing parts eliminated, but also unnecessary costs through the delivery of too many parts can be successfully avoided
- Process documentation: Through the software-based selection process, where every step is recorded and documented, quality, in terms of completeness and accuracy of the goods which have been put together can be fully evidenced
- Manual entry: In a parts list you can also store an item which does not need to be counted, e.g. because it is packed in solid sales packaging. An item like this can be permanently stored as a “manual quantity”
- Printing of parts list elements: When compiling or picking a parts list with several elements, an automatic printout can be generated after an element has been successfully entered or counted. In this way, each counting process can be logged as a printout, in parallel with standard storage in EasyTouch

Options

- The central data memory function Save Server (SET-10) for additional storage of all measurement data in a central, local server directory. By doing this the measurement data of all connected EasyTouch weighing systems as well as from all installed EasyTouch functions will be stored. A particular benefit of doing this for those users with several weighing systems is that all weighing data is consolidated in just one database and you can search for individual measurement data from several balances in just one table. The Save Server data memory is also tamper-proof and cannot be changed
- EasyTouch Quick Key (SET-311): This function enables you to reserve specific master data objects for specific user roles. The selected objects will be displayed to these users as quick-access keys on the screen
- Activating element printing: When creating or maintaining a parts list, you can activate or deactivate automatic individual printout for each element
- Auto print: If auto print for individual components is activated, then, when using this parts list, a print process will be triggered automatically on the standard stored printer once the quantity has been entered correctly and the affected element has been saved – without the need for any additional manual action by the operator

License information

- Licensing: One license can be operated on up to four terminal devices (PC, laptop, tablet) at the same time, working independently
- User: You can store as many users as you need in one license
- Balances: You can store and operate as many balances as you need in one license
- Communication between balance/terminal device: The balance(s) can communicate with the PC, laptop or tablet by serial connection, USB, Bluetooth, Ethernet or WiFi

SPECIFICATIONS

Article codes, product groups & Status information

Model article-code	SET-35
Model-Serie	ETS
Assortment	KERN
Product Type	Software
Product group	EasyTouch
Product usage type	Main item;Accessories/Services
EAN code (Model)	404576 14765 16
Predecessor Model	SET-35-2022a
Customs tariff number	852349 10

Technical data - Packing & Shipping

Delivery time	1 d
---------------	-----

FUNCTIONS

Standard



Option



SOFTWARES

Model	Description
SET-14	KERN EasyTouch SET-14 Individual Print
SET-40	KERN EasyTouch SET-40 Protect
SET-411	KERN EasyTouch SET-411 Hotkeys